



1. DRILL A 5/8 INCH MOUNTING HOLE

2. UNTHREAD THE PLASTIC NUT FROM THE FLOAT SWITCH.

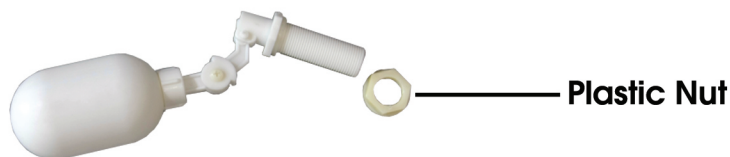

3. SLIDE THE THREADED SIDE OF THE FLOAT SWITCH THROUGH THE 5/8 INCH HOLE AND RE-ATTACH THE PLASTIC NUT.

4. THREAD THE FIXED ELBOW INTO THE FLOAT SWITCH.

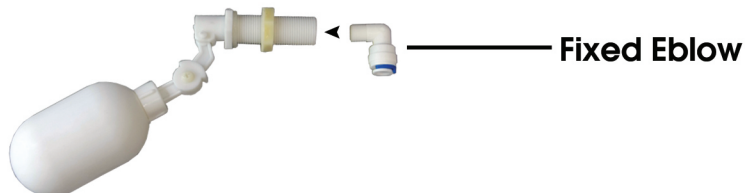

5. REMOVE THE BLUE CLIP FROM THE FIXED ELBOW



6. CONNECT THE R.O TUBING TO THE FIXED ELBOW.

